

[Skip to content](#)

Manuals+

User Manuals Simplified.



KUGOO Kirin Mini 2 Kids Electric Scooter User Manual

August 6, 2022August 7, 2022  [Leave a comment on KUGOO Kirin Mini 2 Kids Electric Scooter User Manual](#)

[Home](#) » [KUGOO](#) » KUGOO Kirin Mini 2 Kids Electric Scooter User Manual 

Contents [hide](#)

[1 KUGOO Kirin Mini 2 Kids Electric Scooter](#)

[2 Basic information](#)

[3 Product introduction](#)

[4 Fold and assemble the scooter](#)

[5 Battery charge](#)

[6 Usage](#)

[7 Cleaning and maintenance](#)

[8 Maintaining](#)

[9 Documents / Resources](#)

[9.1 Related Manuals / Resources](#)



KUGOO Kirin Mini 2 Kids Electric Scooter



Thank you for purchasing KUGOO KIRIN MINI2 Electric scooter In order to ensure safety of you and others, please read the instruction before you use it. There might be a slightly different between the product and the picture

Basic information

This instruction is including the function, usage and maintenance of the KUOO KIRIN MINI2. Please prepare your purchase information before contacting customer service, because it is needed during the process.

Important information

You must obey the law when riding the e-scooter. Users have to take risks and responsibilities. It includes, but are not limited to muscle injuries, fractures, lacerations, serious injuries and death, and other risks that may be associated with riding of the e-scooter. Make sure to wear the protective sets(helmet, elbow pads, knee pads, etc).

Safety warning

- Safely dispose the package. It is dangerous for kids and pets.
- Checking the wholeness of the product, If any parts are missing, please contact the seller.
- If there is any damaged, please don't use it.
- Please use the standard charger.
- Look after your kid if he or she rides the e-scooter.
- Only use the components from our company.
- Be careful with the electricity. No water or liquid contacted.
- Use a dry cloth to remove dust. Do not spray liquid onto product.
- Do not immerse the product, any of its components or accessories in water.

- Do not use on the stairs.
- The e-scooter could only take one person.
- Cover the product to prevent dust. Do not store it in a dusty environment, which may cause damage. Do not ride in areas with fire hazards.

Scrap disposition

Do not burn, bury or drop the e-scooter with the household garbage. If the battery is broken or got fire, It will cause danger and environment pollution. Please obey the rules and dispose it carefully.

Product standard


Items	Details	Parameters
Specification	Folded Size	854 x 420 x 340mm
	Unfold Size	854 x 420 x 980mm
	Net Weight	8.9kgs
	Maximum load	65kgs
	Grade ability	≤15°
Product performance	Suitable terrain	Smooth road, slope less than 15°
	Operating temperature	25°C
	Storage temperature	-10°C to 50°C
Speed and mileage	Maximum speed	15 km / h
	Cruising distance	15km (load: 50kg)
Tyre	Front tyre	8-inch Solid tyre
	Rear tyre	6.5-inch "Solid tyre
	Type	18650 Rechargeable lithium ions/18650
Battery Parameter	Battery protection type	Overcharge, over discharge, and overheat automatically shut down
	Voltage and current	21.6V 4Ah
	Total Power	86.4Wh
Charger parameters	Input voltage	AC100-240V 50/60Hz
	Output voltage	DC 25.2v 1a
	Charging Time	4-5 Hours

Product introduction

Packing List

- KIRIN MINI2 e-scooter x1
- Handle x2
- Charger x1
- Instruction x1

Diagram of KUGOO KIRIN MINI2


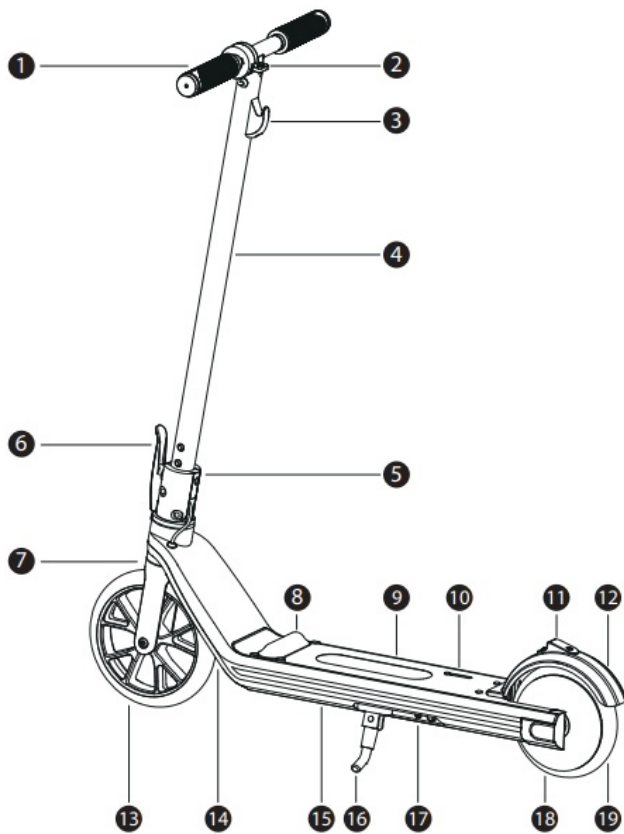


1. Handle
2. Finger electronic handbrake
3. Folding hook
4. T-column riser
5. Folding holder
6. Folding latch
7. Front fork
8. Foot accelerator
9. Shock pad
10. LED display and switches
11. Folding lock
12. Rear fender
13. Front wheel
14. Front axle
15. Foot pedal
16. Kickstand
17. Charging port
18. Reflective warning sticker
19. Rear wheel

The actual product details and specifications due to product upgrading and optimization shall be subject to change without notice

Button information

KIRIN MINI2 have different parts of the display, you have to know them before your riding.

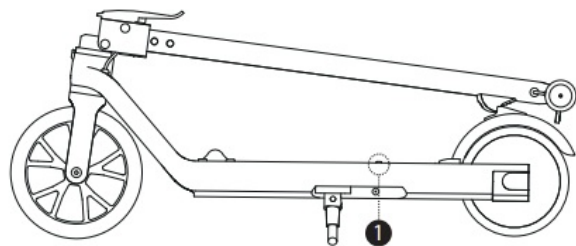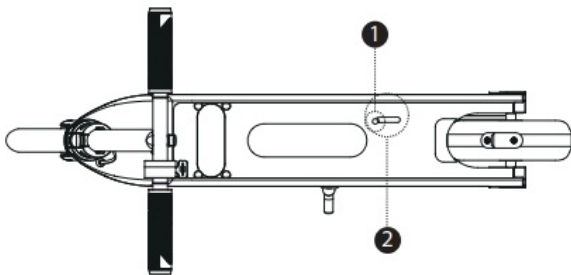

1. Power: 3-5seconds to turn on or off
2. Mode: After power on, click the on/off button to choose mode 1, 2 or 3

Display information

- 3 Indicates the remaining battery



Indicates the speed mode: **B** Mode 1- blue; **B,R** Mode 2- red and blue; **R** Mode 3- red.


WARNING:

if there is no power please stop and turn off the power.

Fold and assemble the scooter


Please ensure that the power of KIRIN MINI2 has been turned off before assembling the scooter. Most of the parts have been assembled before leaving the factory. A few parts are required to be assembled before riding.

Handlebars assemble

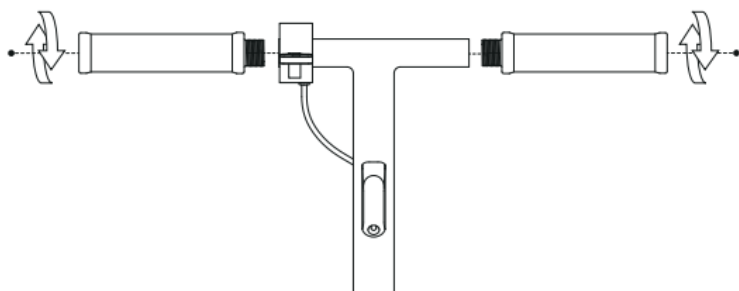




Tighten in the direction of the arrow

Kickstand of E-scooter

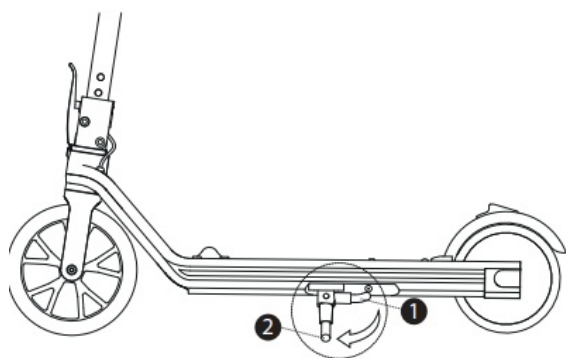

1. Find the kickstand beside the pedal
2. Push the kickstand down

Fold and unfold the E-scooter

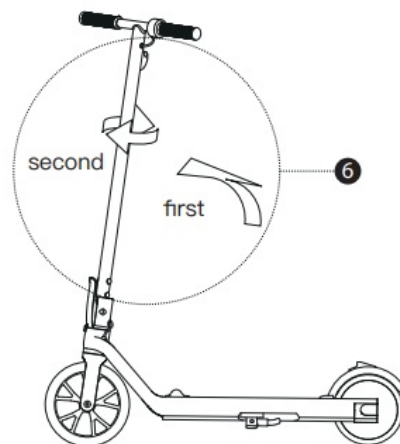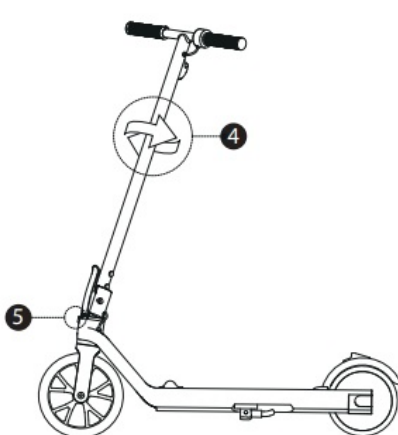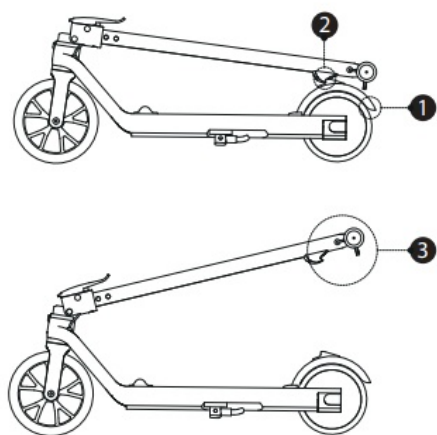

1. Press down on the rear fender.
2. Release the folding hook latch.
3. Lift the steering column to the third position.
4. Turn the steering column about 45 degrees in the direction of the arrow.

5. Press harder while turning up the steering column & make sure the front folding is locked well. First, lift the steering column, reset the folding button, and second turn the pole to straighten.

The above is the unfolding process of the scooter. If you need to fold, just reverse the process.

Battery charge

Please charge the scooter before use.

How to charge

1. Turn off the scooter before you start to charge.
2. Find the socket.
3. Use the right charger.
4. The light will be red while charging.
5. The light will be green when charging is completed.

WARNINGS:

- If it is the first charge, please charge the E-scooter at least 4 hours before using it.
- Under no circumstances should you use a scooter while charging.
- Do not charge for longer than necessary. The standard charging time is about 4.5 hours (4ah battery).
- Charging too long can affect battery life and performance.
- To extend battery life, charge it at least every two months.

Battery standard

Components	Parameter
Type of the battery	Rechargeable lithium ions
Charging time	4-5 hours
Voltage	21.6V
Battery capacity	4Ah
operating temperature	-10°C to 40°C
Charging temperature	5°C to 45°C
storage temperature	-20°C to 50°C
KWh	86.4Wh
Protection	Overcharge, over-discharge, over heat automatically shut down

Usage

Before riding the KIRIN MINI2, please read the following information.


- You have to wear a helmet and other protective clothing.
- Only under 65Kg are allowed.
- Obey the local law.
- The KIRIN MINI2 contains the motor, which may be classified as a motor vehicle according to your local regulations. It is your responsibility to comply with local regulations.

Riding teaching


Suppose you are wearing appropriate protective gear and have placed your scooter on a level road with sufficient power, follow these steps.




Hold the handle bars with both hands, put the right foot on the acceleration, and slide by the left foot to make the e-scooter move.

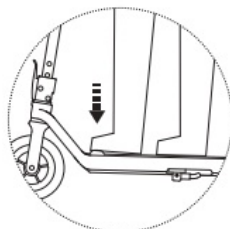


Step on acceleration Harder, faster

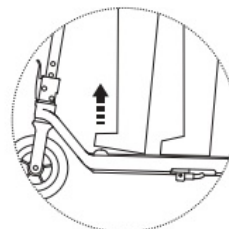

Release to slow down

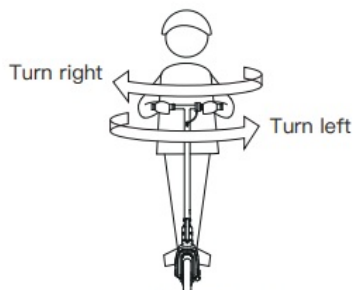

Turn the handle with both hands.

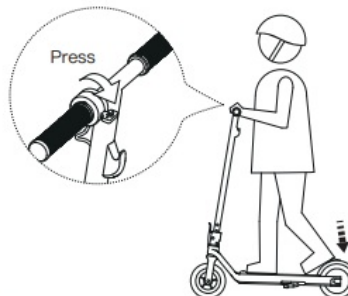

Press the electronic handbrake and step on the rear fender with your foot at the same time to slow down or stop the scooter. Be very careful when you get off.

To turn off the scooter, hold down the power button for 3 to 5 seconds after full stop for a few seconds.

Practice guidelines

Please practice riding until you can easily use all scooter functions. See the tips below.

- Avoid passing through anything that may stick on or stuck in the wheels.
- Wear fat shoes for flexibility and stability.
- Keep practicing until you can easily get on, forward, turn, stop and get off.
- Riding on the road with a 15-degree slope is OK for KIRIN MINI2, but not recommended. KIRIN MINI2 is preferred to relatively fat road conditions.
- Do not ride on slopes, pedestrians or obstacles until you are proficient with the scooter.

The KIRIN MINI2's weight is about 8.9KGs. Remember to fold the scooter before you pick it up.

Cleaning and maintenance

Cleaning

After long time riding, you need to clean it to ensure the KIRIN MINI2 works well.

- Turn off the scooter before cleaning.
- Use dry cloth to scrub it.
- Avoid contacting liquid.
- Do not use alcohol and detergent.
- Do not spray the liquid directly on any part of the scooter.

Storing

To store KIRIN MINI2, please follow the below instructions:

- Please charge it before you store it.
- Charge it every 2 months.
- Cover KIRIN MINI2 to prevent dust.
- Do not store it in a dusty or moisture environment, which may cause damage.

Transport

Close and fold the scooter before moving, lifting, or transporting it (see section 3.3 for instructions).

- When lifting the whole scooter, please note the weight of KIRIN MINI2 is about 8.9KGs.

Maintaining

Your KIRIN MINI2 electric scooter is warranted to the original owner for one year from the date of purchase against defects in material and workmanship under normal use and service.

This warranty gives you specific legal rights and you may have other rights depending on local laws. This warranty lasts for one year

from the date of purchase. If the product is repaired or replaced, the warranty period will not be extended. This warranty only covers technical hardware defects under normal use conditions during the warranty period.

The guarantee does not include

- (a)transport
- (b) store
- (c)usage
- (d)don t obey the instruction
- (e)change
- (f)repair without authorization
- (g) abrasion
- (h)accident

Statement:

we are not responsible for the accidental use of this product and its liability will not exceed the purchase price of the product in any condition.

Documents / Resources



[KUGOO Kirin Mini 2 Kids Electric Scooter \[pdf\] User Manual](#)
Kirin Mini 2, Kids Electric Scooter, Electric Scooter, Kirin Mini 2, Scooter

Related Manuals / Resources

[GOTRAX Electric Scooter Documentation](#)

[Mi Electric Scooter Manual](#)

Mi Electric Scooter Manual - Download [optimized]Mi Electric Scooter Manual - Download

[Mi Electric Scooter Pro Manual](#)

Mi Electric Scooter Pro Manual - Download [optimized]Mi Electric Scooter Pro Manual - Download



[ELTRA 2145711C Electric Scooter User Manual](#)

ELTRA 2145711C Electric Scooter User Manual KEYCARD INSTRUCTION After booting, use keycard on the dashboard. You can ride...

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

[Manuals+](#),

- [home](#)
- [privacy](#)